

Mission:
To protect, promote & improve the health
of all people in Florida through integrated
state, county & community efforts.



Rick Scott
Governor

John H. Armstrong, MD, FACS
State Surgeon General & Secretary

Vision: To be the Healthiest State in the Nation

WATER TESTING PROCEDURE – BACTERIOLOGICAL ANALYSIS WELL WATER INSTRUCTIONS – SAMPLE COLLECTION

FLUSH LINE by running water for 3 to 5 minutes, or until service line is clear before sampling.
(See instructions on the back of the “Sample Submission Form”).

WHIRL-PAK BAG – Please see instructions on back.

INSTRUCTIONS – LABORATORY FORM

- I. Provide all information requested.
- II. Additional comments:
 1. **System/Owner’s Name:** Name of water system, or name of business, or last name of owner of private well.
 2. **DEP DISTRICT:** Use “SW”
 3. **COLLECTION NUMBER:** Number bag to correspond to sample point; write the system’s name on the bag.
 4. The laboratory form will be mailed – provide a correct and complete mailing address on bottom left-hand corner of lab form.
 5. If you have any questions, please call (352) 540-6800 option #3 prior to sample collection.

ADDRESS – 7551 Forest Oaks Blvd, Spring Hill, FL 34606

- Samples are accepted **Tuesday, Wednesday, and Thursday** from 7:30 a.m. to 11:00 a.m., but **NEVER** on a MONDAY, FRIDAY, A HOLIDAY OR THE DAY BEFORE A HOLIDAY!
- A fee is collected when you pick up the bag(s).
- Return bag(s) same day after sample collection. Place the sample on a freezer cold pack and submit as soon as possible.
- Do **NOT** submit surface water samples, sewage treatment plant samples, etc. as a “drinking water bacteriological analysis” sample. **PRIOR ARRANGEMENTS** MUST BE SCHEDULED WITH THE LAB FOR THIS TYPE ANALYSIS.
- Fill water bag to the top fill line (see instruction #3 on reverse side).


T.M.

THIO-BAG

Instructions for Use of Nasco's Sodium Thiosulfate Whirl-Pak® Bags

Caution: Do not allow the thio tablet to fall out of the bag.

OPENING

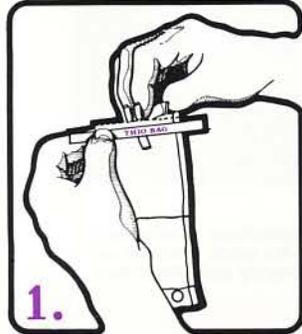


Tear off top at scored line.




Pull tabs outward to open bag. Sometimes a pull on the bottom is also helpful.

FILLING

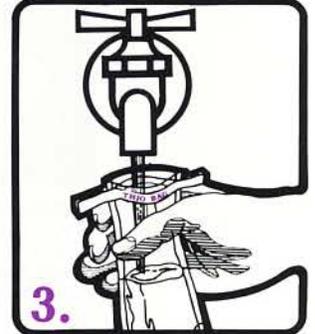

Fill bag to the fill line.

CLOSING

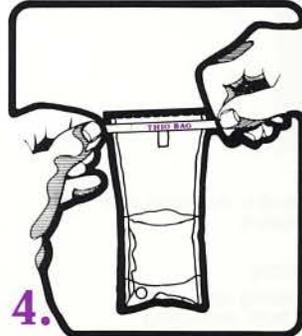

Pull wire ends to close bag.



Whirl bag 3 complete revolutions. (Do not roll tapes down.) Leave airspace for mixing in lab.



Turn tape wire inward on opposite face of fold.

NASCO, FORT ATKINSON, WISCONSIN 53538 • MODESTO, CALIFORNIA 95352

U-5352 PRINTED IN U.S.A.